


Outdoor Furnace and Forced Air Wiring Configuration with No Zone Valve


24-V Thermostat (p/n 587)

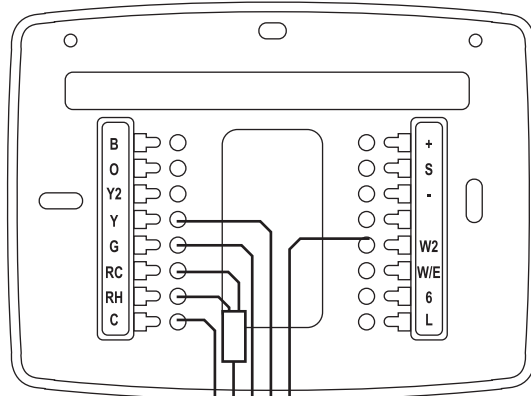

NOTE
Change Installer Setup menu:
ITEM 2. to ELE to force thermostat to turn blower on.

G
R
C
W2
Y

Furnace or Fan Center

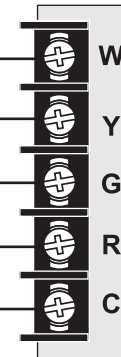

For illustration purposes only:
• Location of thermostat may vary.
• Not for heat pump application.

NOTE
Thermostats must be installed by qualified technician.

