
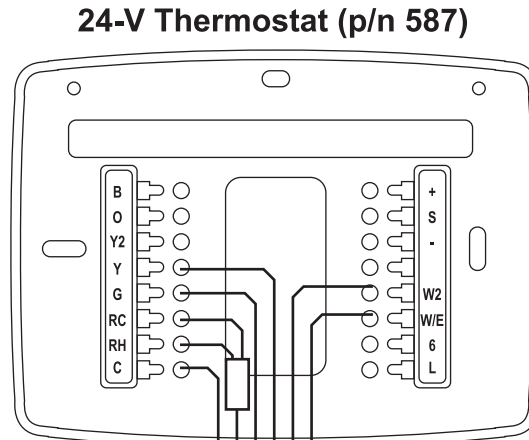



# Outdoor Furnace and Forced Air Wiring Configuration

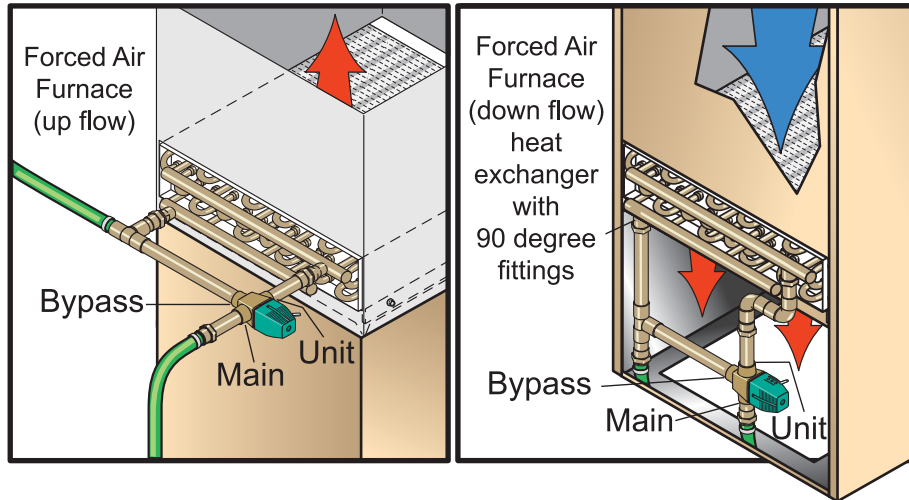

Y  
G  
R  
C

W2  
-W

**NOTE**  
Change Installer Setup menu:  
**ITEM 2.** to ELE to force thermostat to turn blower on.

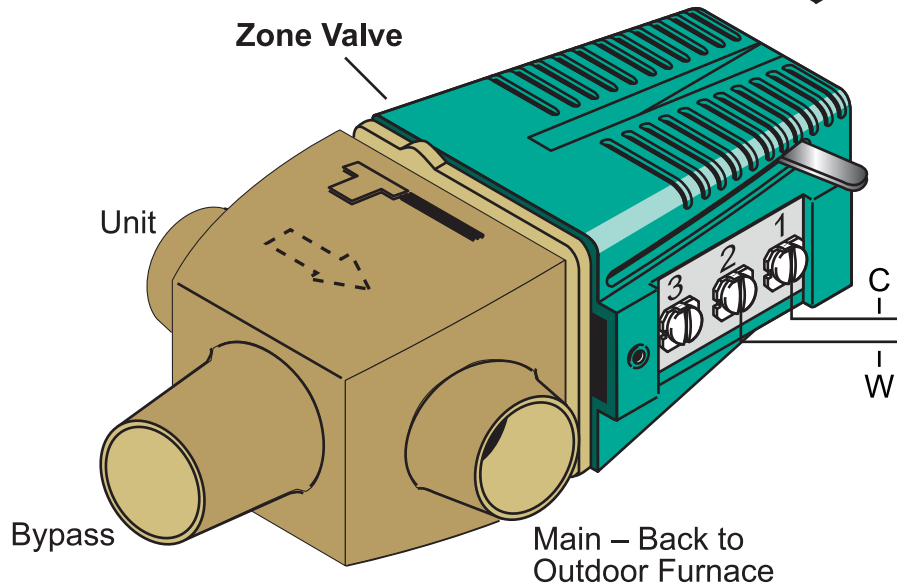

Furnace or Fan Center



For illustration purposes only:  
• Location of thermostat may vary.  
• Not for heat pump application.

**NOTE**  
Thermostats must be installed by qualified technician.

